



40 Huntingwood Drive Huntingwood NSW 2148

Phone: (02) 8825 1999 Website: www.aeroflowperformance.com

INSTALLATION MANUAL

AEROFLOW PERFORMANCE

ATTACK OEM SHIFTER

WARNING!

BEFORE PROCEEDING WITH INSTALLATION PLEASE READ INSTRUCTIONS CAREFULLY. THIS PRODUCT REQUIRES DETAILED KNOWLEDGE OF AUTOMOTIVE SYSTEMS. WE RECOMMEND THAT THIS INSTALLATION BE CARRIED OUT BY A QUALIFIED AUTOMOTIVE TECHNICIAN.

The shifter mechanism is precision-assembled at our factory. Any modification of the shifter will void its warranty, and can cause it to malfunction.

INTRODUCTION

Congratulations on your purchase of Aeroflow Performance Attack OEM shifter. Aeroflow Performance products cannot and will not be responsible for any damage, or other conditions resulting from misapplication of the parts described herein. However, it is our intention to provide the best possible products for our customer, products that perform properly and satisfy your expectations. Should you have any questions? Please call technical support at +61 2 8825 1900 and have the product part number on hand when calling.

The Bang Shift Attack OEM replacement billet shifter handles are perfect for those that want the race orientated look while still retaining your factory OEM automatic shifter assembly. This quick and easy to install handle will enhance any interior of the modern-day car without the hassle of a new shifter assembly. The pistol grip handle is a handy two-piece bolt together design that allows interchangeable billet side plates to be purchased separately. Detent activation is controlled by a trigger lever mechanism that is pulled in towards the gear shifter handle to activate and control the lockout.

This is a direct replacement shifter handle designed specifically to replace a Holden VE 2006-2012 OEM shifter handle.

For more information or technical enquires

Contact: Aeroflow Performance on

Phone: (02) 8825 1979 Website: www.aeroflowperformance.com

Shifter Installation Guideline


Take a moment to read and understand these instructions before installing your Attack OEM shifter handle.

Installation of this kit requires permanent modification of some stock parts. We highly recommend that you retain all factory parts.

WORK SAFELY! Turn off the ignition, and set the parking brake to prevent the vehicle from rolling during manipulation of the gearshift. Place blocks in front and behind the front wheels to prevent vehicle from rolling.

INSTALLATION OF ATTACK SHIFTER HANDLE


1. Put gear shifter into drive with handbrake on. (**Caution:** Ensure the has the wheels choaked to stop the car rolling).
2. Remove rear plastic trigger cap from the OE shifter handle.

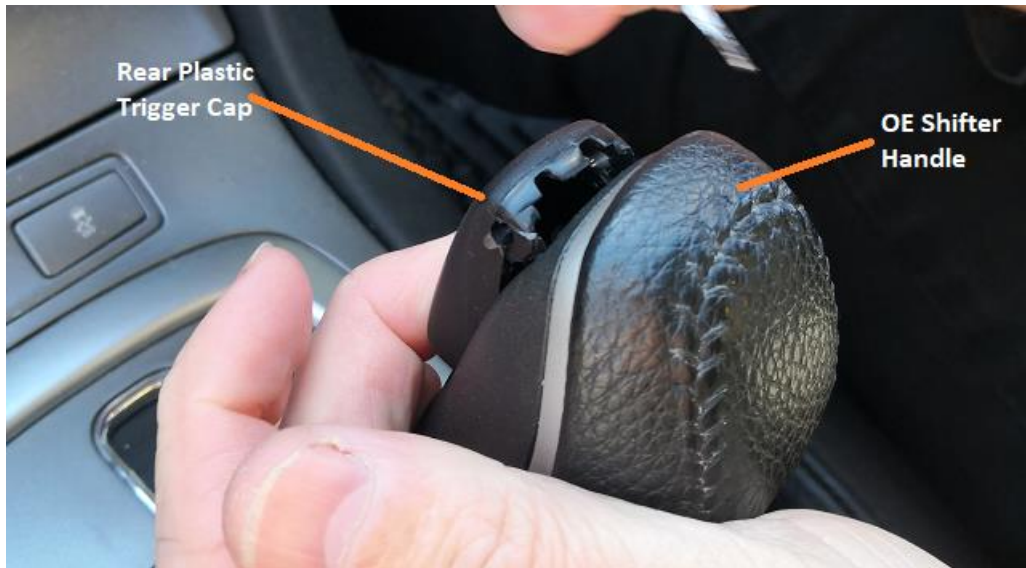

3. Using your Phillips head screwdriver, remove the inner screw from inside the cavity in which the rear plastic trigger cap was removed.



4. Once this inner Philips head screw is removed you can remove the front cover on the OE shifter.
5. Move to the front of the OE shifter you will see a silver dress trim around the OE shifter handle. Pull this silver plastic divider out and set aside.
6. Remove the bottom circlip from the OE shifter handle and set aside.

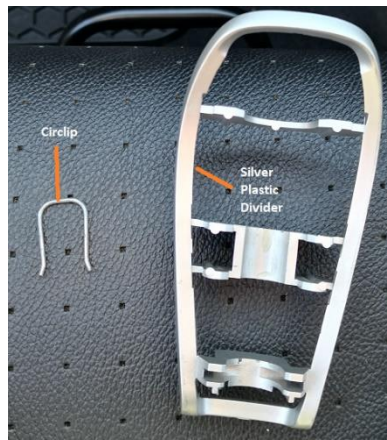

7. Pull the OE shifter handle body off the shaft from the vehicle and set aside.
8. On your new billet Attack shifter handle, undo the allen key on the bottom of the shifter handle.
9. Slide the Attack shifter down over the shifter shaft until it bottoms out in place.
10. Tighten the allen key screw on the front of the shifter handle.
11. Run through each gear selection using the Attack handle to ensure each gear is able to be selected.
12. Before driving vehicle on the road ensure to check all functions are working correctly and all gears function as per factory.
13. Congratulations, the installation of your Bang Shift Attack OEM is now complete!



For more information or technical enquires

Contact: Aeroflow Performance on

Phone: (02) 8825 1979 Website: www.aeroflowperformance.com